

Zeiss Inspect 2025 License Guide


For further support, please contact your distributor.




Dongle update

Update using CodeMeter Control Center

01. Launch CodeMeter Control Center
(you can search in the Microsoft taskbar)

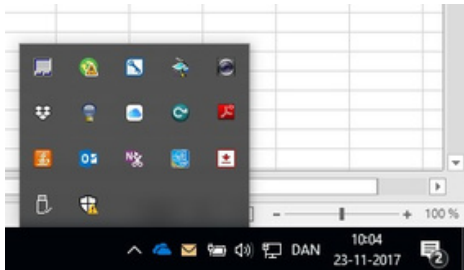

02. Press License Update - Next
03. Choose Create license request - Press next
04. Choose Extent existing license - Press next - Next
05. Choose where the file should be saved - Press Commit - Finish

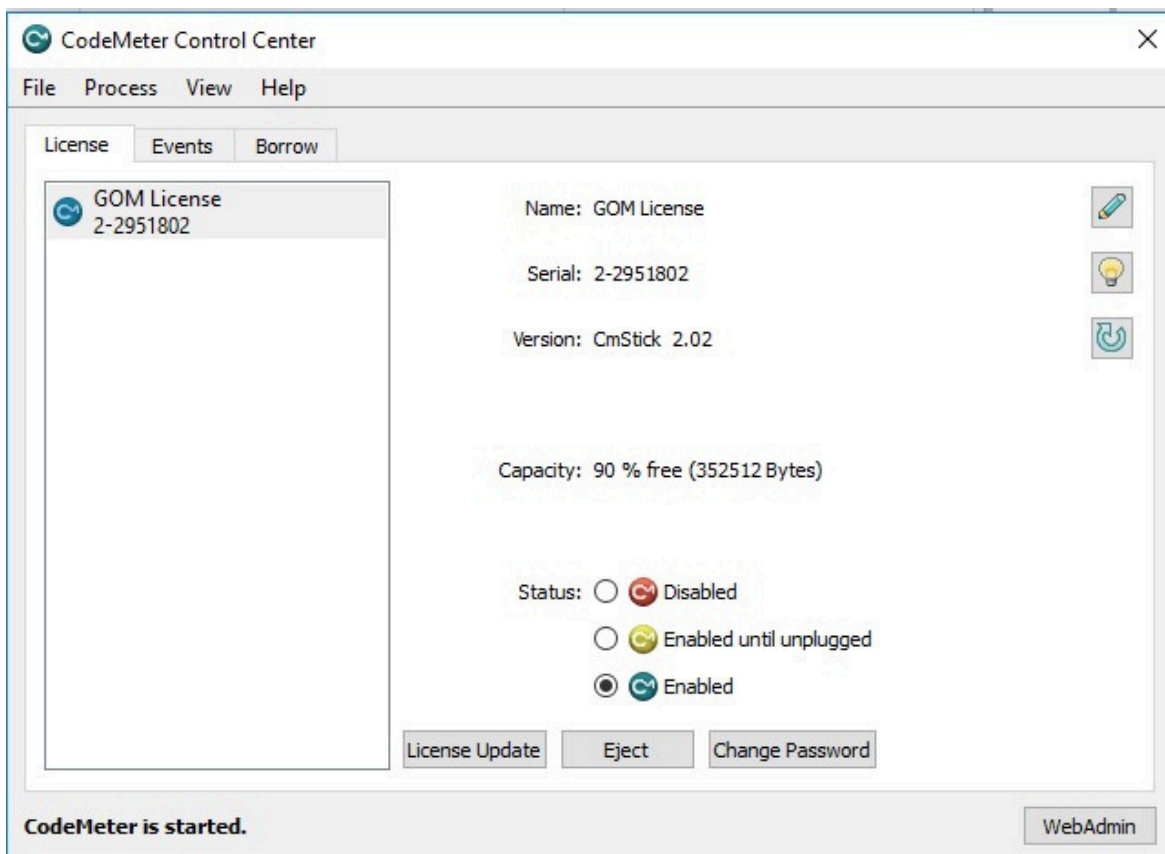


Fill in and upload the file to [Dongle Update Form](#).


ZEISS will then send an Activation ID to the e-mail you have entered and now go follow the steps on the next pages.

How to import a dongle update file

01. Find email from the ZEISS Portal which encases your Activation ID.
02. Open Zeiss Quality Suite.
03. Select "License Overview".

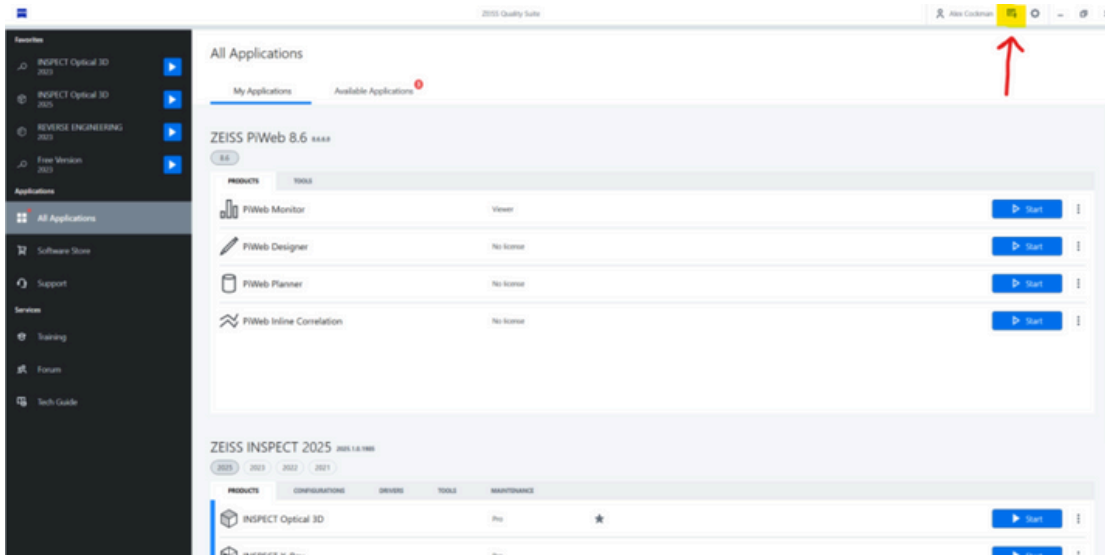

04. Open the ZEISS Quality Suite program.
05. Select "License Overview" and click on the "License Activation" button.

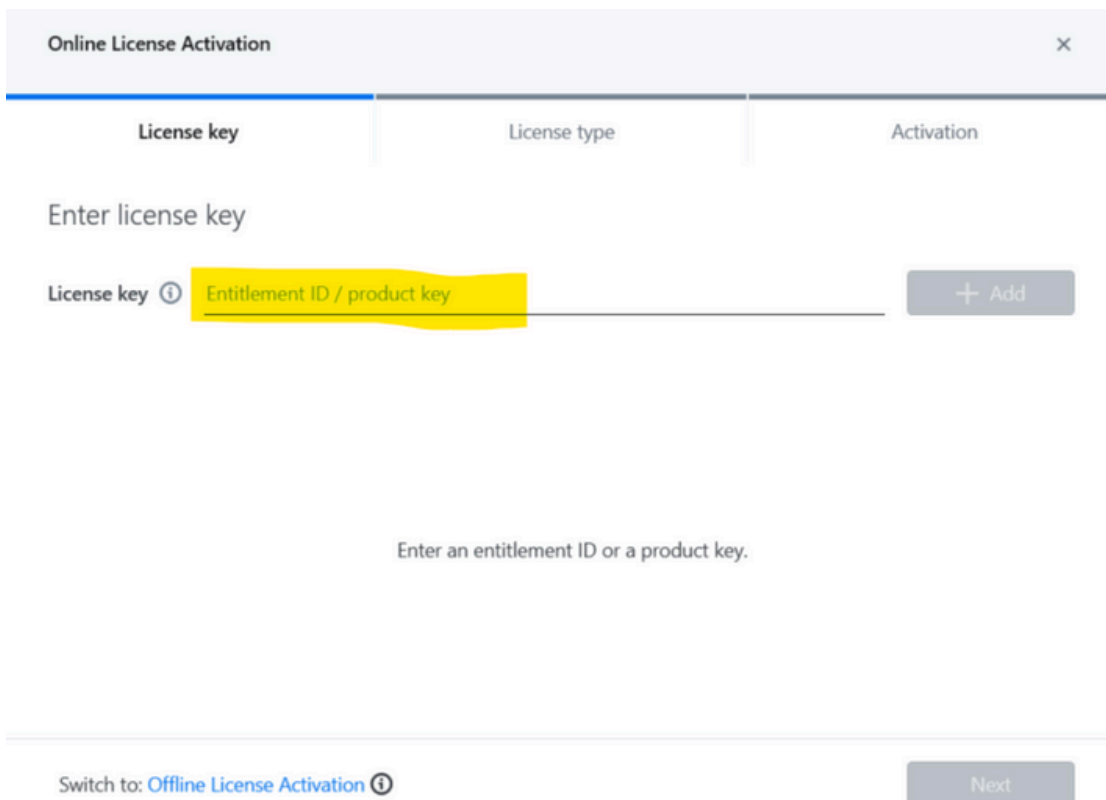


The screenshot shows the 'Online License Activation' dialog box. It has three columns: 'License key', 'License type', and 'Activation'. Below the columns, there is a text input field labeled 'Enter license key'. The field contains the text 'Entitlement ID / product key' and is highlighted in yellow. To the right of the field is a '+ Add' button. Below the input field, there is a message: 'Enter an entitlement ID or a product key.' At the bottom of the dialog, there is a link to 'Switch to: Offline License Activation' and a 'Next' button.

06. Affirm Wibu dongle is plugged into computer and matches dialogue.
If correct, select "Activate".
07. Select "Finish".

How to use the same Wibu dongle on Multiple Laptops


01. Open Zeiss Quality Suite.
02. Select "License Overview".

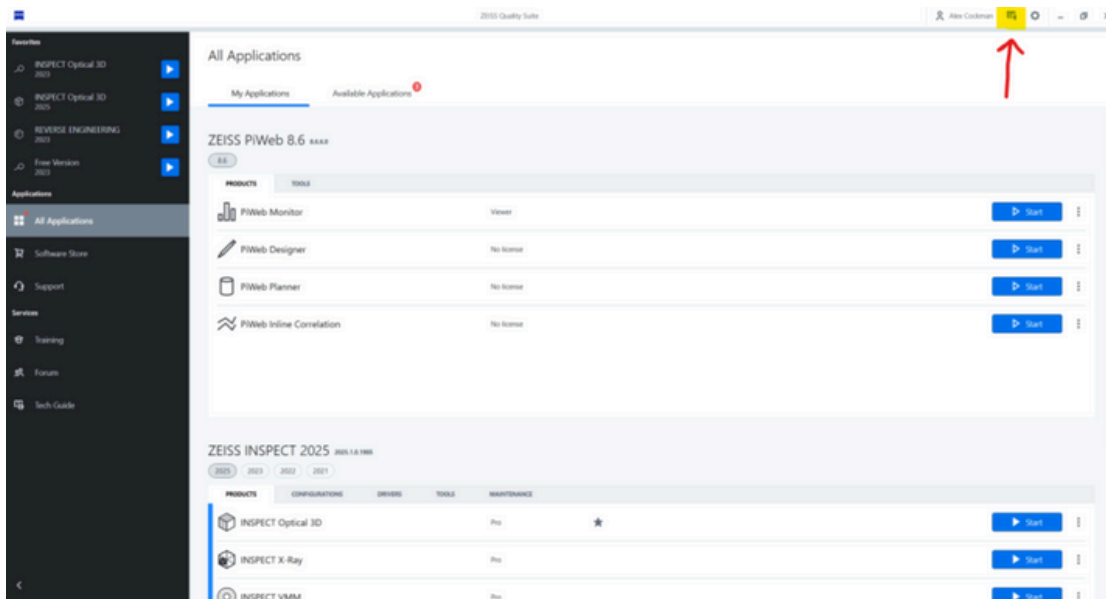

03. Left click on the correct license or select the "details" icon.



04. Select "License File" under Use License.

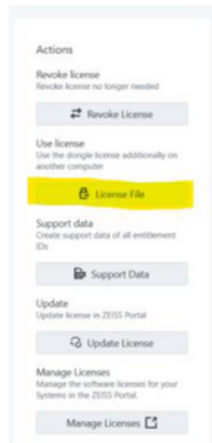

05. Select "License File". And save .zlic file to external hard drive, or server.




How to use the same Wibu dongle on Multiple Laptops

06. Move to other computer(s) that you would like to run the software on using this particular Wibu dongle.

07. Locate .zlic file that was saved on step 5.

08. Open Zeiss Quality Suite and go to “License overview”.

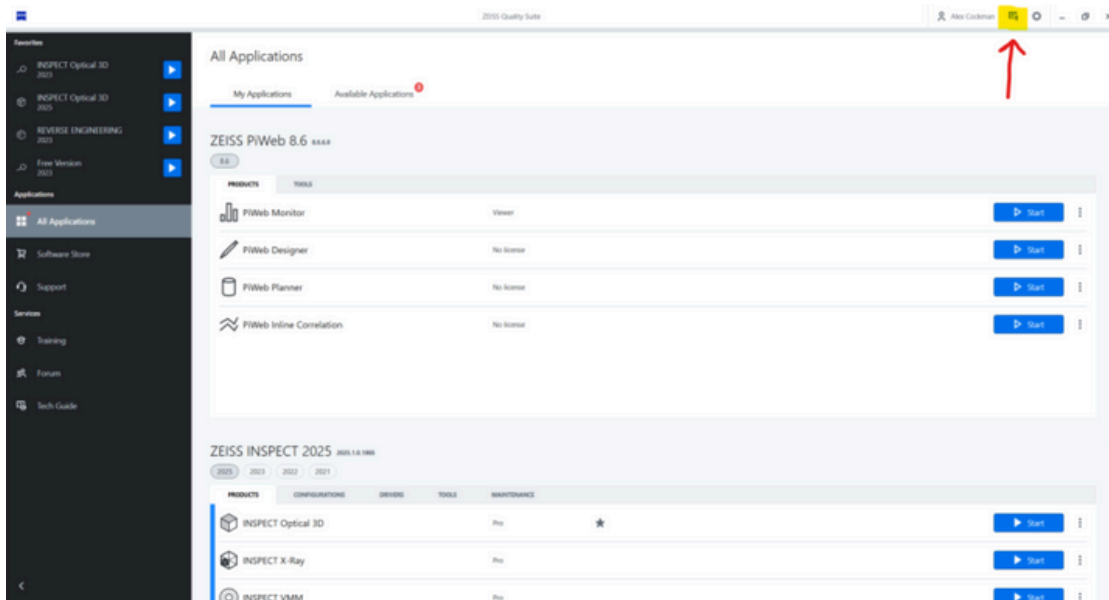

09. Select the “Import” icon.

10. Select the “+” icon or drag and drop .zlic file.

11. Select “Activate”.